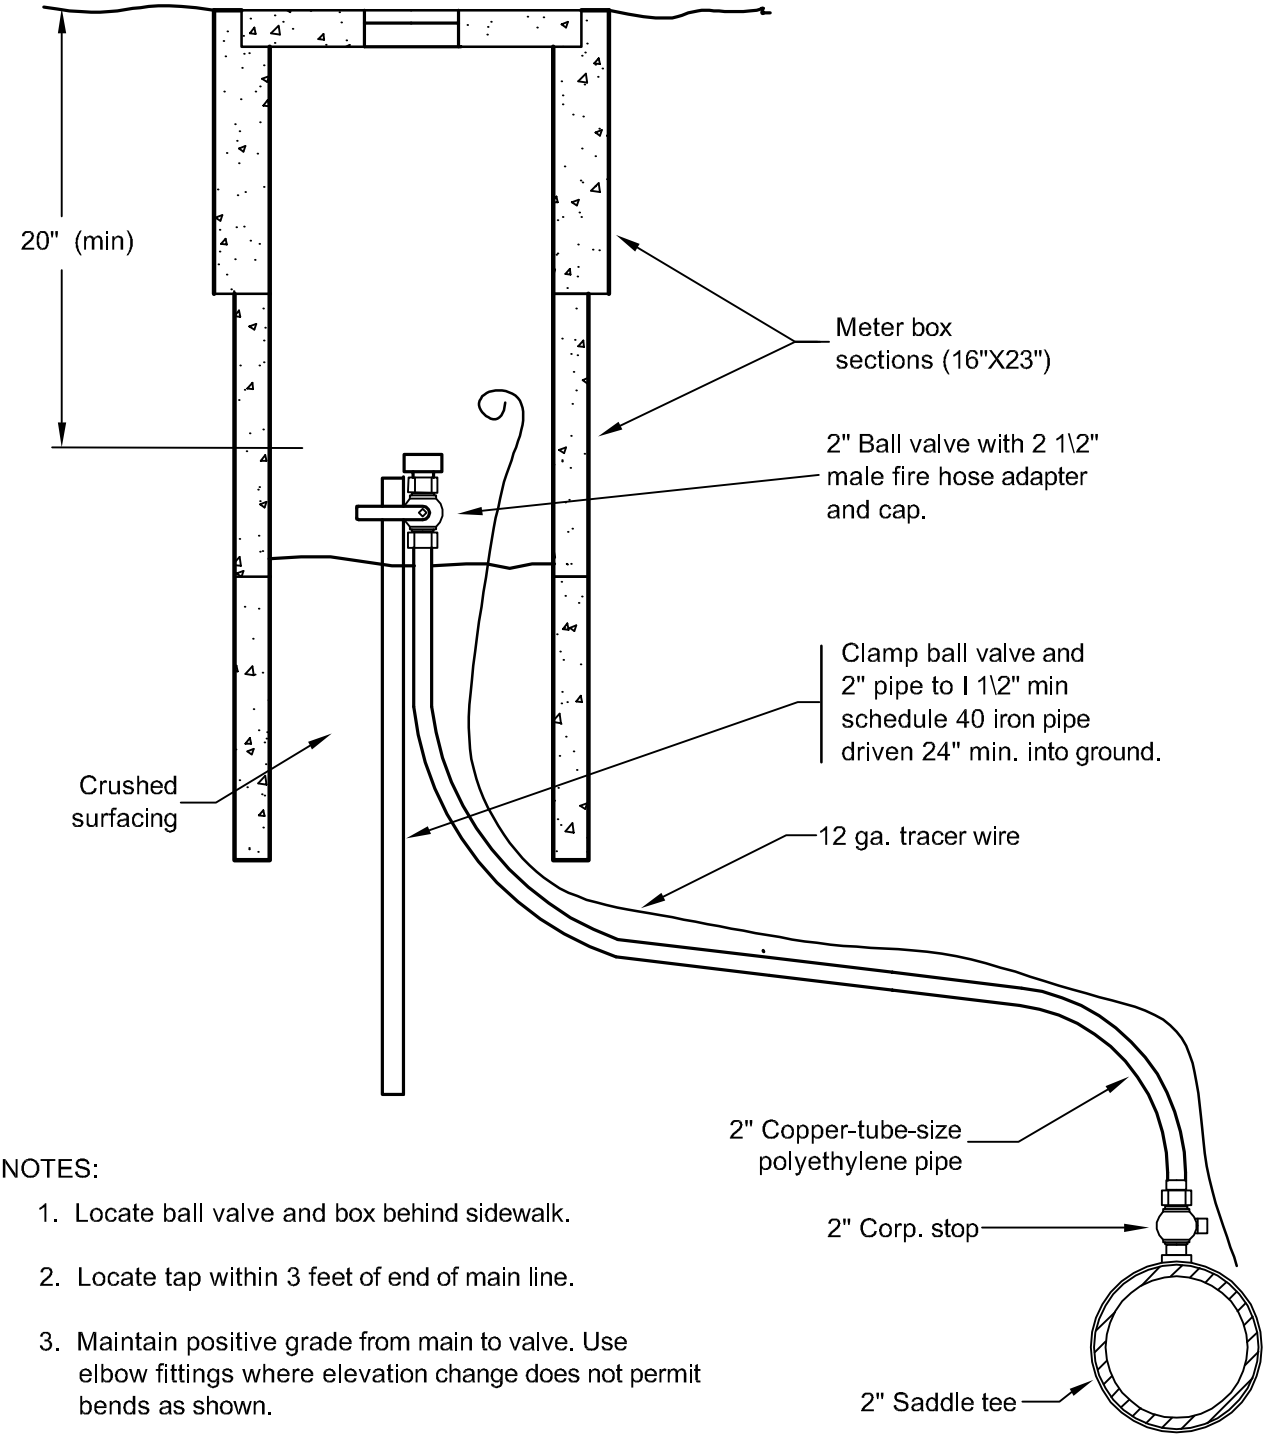


NOTES:

1. Locate ball valve and box behind sidewalk.
2. Locate tap within 3 feet of end of main line.
3. Maintain positive grade from main to valve. Use elbow fittings where elevation change does not permit bends as shown.

AutoCAD: Waterline Blowoff Assy

dwc 3-00
DDR

# BLOWOFF ASSEMBLY

PAGE NO: 17

CITY OF PULLMAN
ENGINEERING DIVISION

ADOPTED: April 8, 2008